



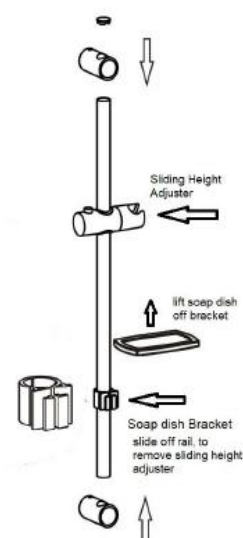

INSTALLATION: EXCITE RAIL SLIDING HEIGHT ADJUSTER

- Using 2 pen tips, or small screwdrivers, press oval hole (white button) must be pushed in at same time to release from wall bracket-ensuring rail is being held as this will come away (this is at both ends), it is recommended to release both ends. Plastic wall fitting bracket will remain on the wall.
- This is what parts will look like.
- To remove the sliding height adjuster, bottom bracket should slide off rail, remove soap dish off bracket, then soap dish bracket will slide off rail, remove sliding height adjuster, when replacing sliding height adjuster making sure button is facing upwards. Button must be fully depressed to slide onto rail

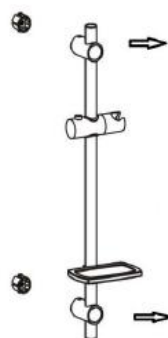





For all servicing needs, please contact CUSTOMER SERVICE on:
FREECALL: 1800 800 919 PHONE: 08 6217 0600 FAX: 08 6217 0699 EMAIL: customer.service@aldertapware.com.au

www.aldertapware.com.au

www.vitobertoni.com.au

V01 211206

FRESCO RAIL SLIDING HEIGHT ADJUSTER INSTALLATION

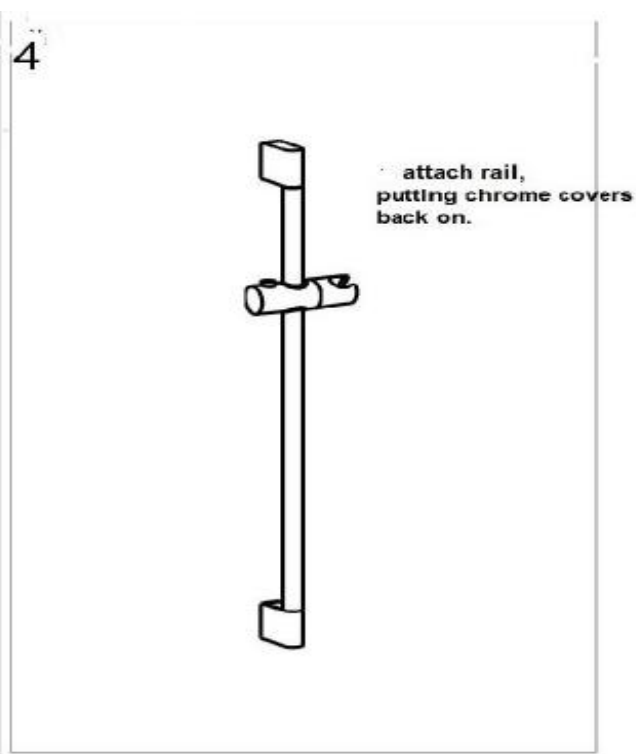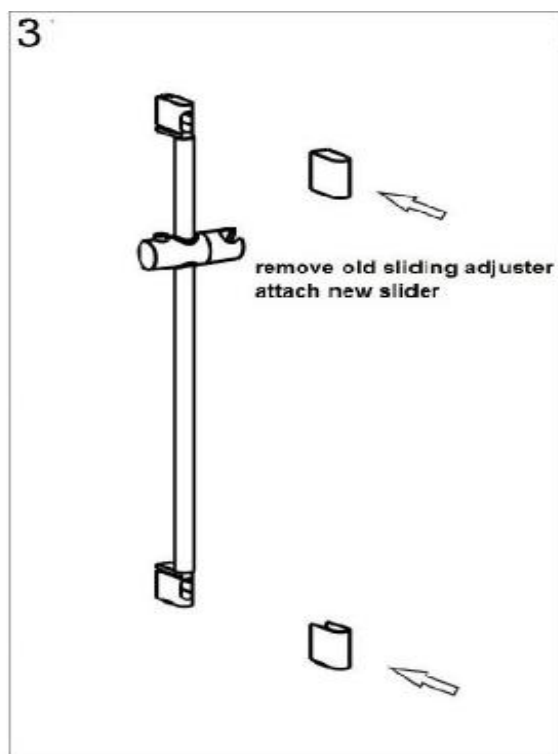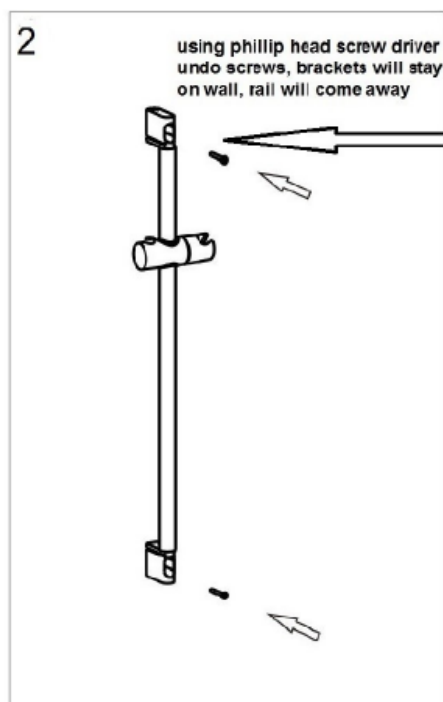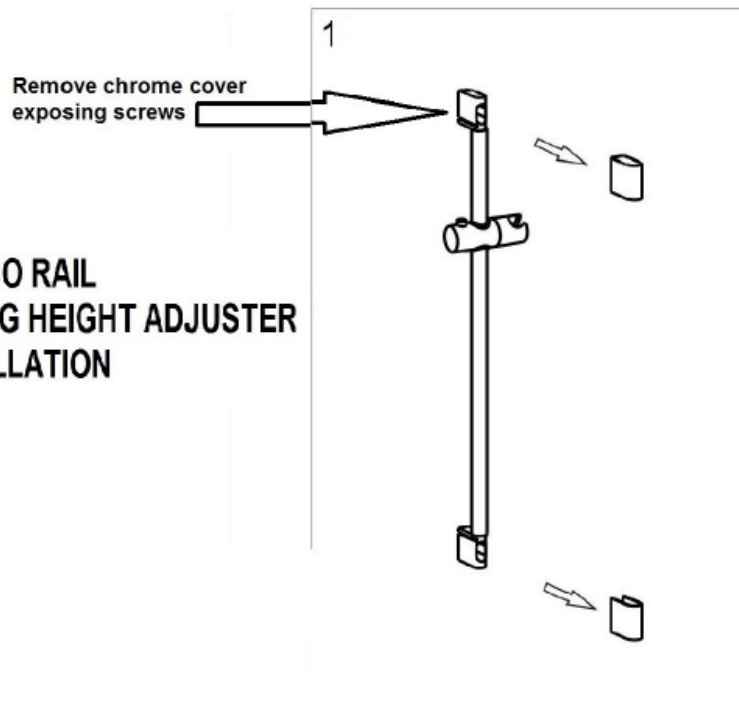

The Slide Bracket is supplied with an elastic band to ensure parts are kept together
Please do not remove until installed.